


Windows 10 - Uninstall JAVA

1. Click **Start**
2. Select **Settings**
3. Select **System**
4. Select **Apps & features**
5. Select the program (JAVA) to uninstall and then click its **Uninstall** button.
6. Respond to the prompts to complete the uninstall

Uninstall C2-20 Configuration Tool

7. Right click Configuration Tool icon and delete at its destination

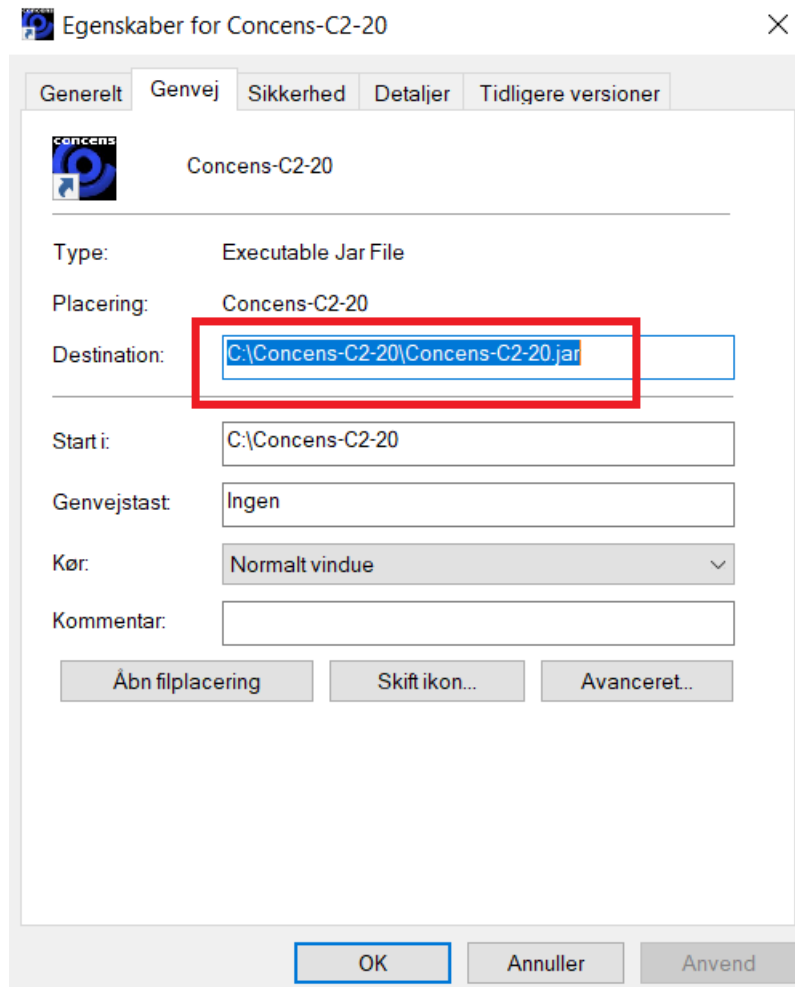







epg	17-02-2016 09:46	Filmappe	
concons-C2-20	11-03-2020 10:16	Ikon	50 KB
Concons-C2-20	11-03-2020 10:16	Executable Jar File	207 KB
Default.sav	11-03-2020 10:16	SAV-fil	1 KB
jd2xx.dat	11-03-2020 10:16	DAT-fil	23 KB
JD2XX.dll	11-03-2020 10:16	Programudvidelse	502 KB
mbc1234.sav	14-09-2018 10:55	SAV-fil	1 KB
MBC12345.sav	14-09-2018 11:02	SAV-fil	1 KB
settings.dat	16-03-2020 08:23	DAT-fil	1 KB



Install JAVA 32-bit

8. Download at <https://www.java.com/en/download/manual.jsp> and install the 32-bit version (if you are using Windows 64-bit you still need to install JAVA 32-bit)

 Windows  Which should I choose?

	Windows Online filesize: 1.97 MB		Instructions
	Windows Offline filesize: 65.52 MB		Instructions
	Windows Offline (64-bit) filesize: 73.73 MB		Instructions

After installing Java, you may need to restart your browser in order to enable Java in your browser.

If you use 32-bit and 64-bit browsers interchangeably, you will need to install both 32-bit and 64-bit Java in order to have the Java plug-in for both browsers. » [FAQ about 64-bit Java for Windows](#)

Insert USB dongle and wait at least 2 minutes – do not download configuration software yet !!!

9. After 2 minutes download and install the software. **PLEASE NOTE THAT THE DONGLE MUST STAY CONNECTED TO YOUR PC DURING THIS WHOLE PROCESS !!!!**

